



**OpenCV**

2020

**INFO 802**

**Master Advanced Mechatronics**

Luc Marechal



**ROS**

**Lecture 6**  
**Vision - OpenCV**

# Course 4 : Vision - Opencv

## Overview

- Interface camera in ROS
- Acquire images from the camera.
- Subscribe to an image camera topic
- Perform simple image processing with OpenCV

# Packages Related to USB Camera

- **ibuvc-camera**: interface package for operating cameras with the UVC standard.
- **uvc-camera**: convenient package with relatively detailed camera settings. (ideal for stereo camera configuration).
- **usb-cam**: very simple camera driver for Bosch.
- **freenect-camera**, **openni-camera**, **openni2-camera**: for depth cameras like Kinect or Xtion. These sensors include a color camera, (also called RGB-D cameras). These packages are required to use their color images.
- **camera1394**: driver for cameras using IEEE 1394 standard FireWire.
- **prosilica-camera**: used in AVT's prosilica camera, (widely used for research purposes).
- **camera-calibration**: camera calibration package that applies OpenCV's calibration feature. Many camera-related packages require this package.

# Interfacing USB webcams in ROS

Find the video devices present on the system

```
> ls /dev | grep video
```

Test camera with Cheese.  
if not installed:



```
> sudo apt-get install cheese
```

usb\_cam driver package installation

```
> sudo apt-get install ros-noetic-usb-cam
```

uvc\_camera driver package installation

```
> sudo apt-get install ros-noetic-uvc-camera
```

Image Related Package Installation

```
> sudo apt-get install ros-noetic-image-*  
> sudo apt-get install ros-noetic-rqt-image-view
```

Found a device numbered 0

```
luc@USMB: ~  
luc@USMB:~$ ls /dev | grep video  
video0  
luc@USMB:~$
```

If no video found, click on Virtualbox menu  
Devices > Webcams > Integrated Webcams

Known issue: <https://doc.ubuntu-fr.org/v4l1>

# Interfacing USB webcams in ROS

## Running uvc\_camera node

```
> roscore  
> rosrun uvc_camera uvc_camera_node
```

## Running usb\_cam node

```
> roscore  
> rosrun usb_cam usb_cam_node
```

## Verify Topic Message

```
> rostopic list
```

images are published in multiple ways, compressed and uncompressed (useful to send images to other ROS nodes and occupying little space)

```
/camera_info  
/usb_cam/image_raw  
/usb_cam/image_raw/compressed  
/usb_cam/image_raw/compressed/parameter_descriptions  
/usb_cam/image_raw/compressed/parameter_updates  
/usb_cam/image_raw/compressedDepth  
/usb_cam/image_raw/compressedDepth/parameter_descripti  
/usb_cam/image_raw/compressedDepth/parameter_updates  
/usb_cam/image_raw/theora  
/usb_cam/image_raw/theora/parameter_descriptions  
/usb_cam/image_raw/theora/parameter_updates  
/rosout  
/rosout_agg
```

```
/camera_info  
/image_raw  
/image_raw/compressed  
/image_raw/compressed/parameter_descriptions  
/image_raw/compressed/parameter_updates  
/image_raw/compressedDepth  
/image_raw/compressedDepth/parameter_descriptions  
/image_raw/compressedDepth/parameter_updates  
/image_raw/theora  
/image_raw/theora/parameter_descriptions  
/image_raw/theora/parameter_updates  
/rosout  
/rosout_agg
```

# Interfacing USB webcams in ROS

The `usb_cam-test.launch` file can launch the USB cam driver with the necessary parameters

```
> roslaunch usb_cam usb_cam-test.launch
```

you will get this warning message about the camera calibration,  
'[WARN] [1423194481.257752159]: Camera calibration file  
/home/xxx/.ros/camera\_info/camera. yaml not found.'

because the calibration file is missing. You can ignore this for now.

```
<launch>
  <node name="usb_cam" pkg="usb_cam" type="usb_cam_node"
output="screen" >
    <param name="video_device" value="/dev/video0" />
    <param name="image_width" value="640" />
    <param name="image_height" value="480" />
    <param name="pixel_format" value="yuyv" />
    <param name="camera_frame_id" value="usb_cam" />
    <param name="io_method" value="mmap"/>
  </node>
  <node name="image_view" pkg="image_view" type="image_view"
respawn="false" output="screen">
    <remap from="image" to="/usb_cam/image_raw"/>
    <param name="autosize" value="true" />
  </node>
</launch>
```

# Interfacing USB webcams in ROS

Visualize the image in another window with image view node

```
> rosrun image_view image_view image:=/usb_cam/image_raw
```

Republish the image in an other format on an other topic

```
> rosrun image_transport republish compressed in:=/usb_cam/image_raw  
[output format] out:=/usb_cam/image_raw/republished
```


Visualize with rqt\_image\_view Node

```
> rosrun rqt_image_view rqt_image_view image:=/usb_cam/image_raw
```

# Interfacing USB webcams in ROS

Visualize with rviz

```
> rqt_image_view image:=/usb_cam/image_raw
```

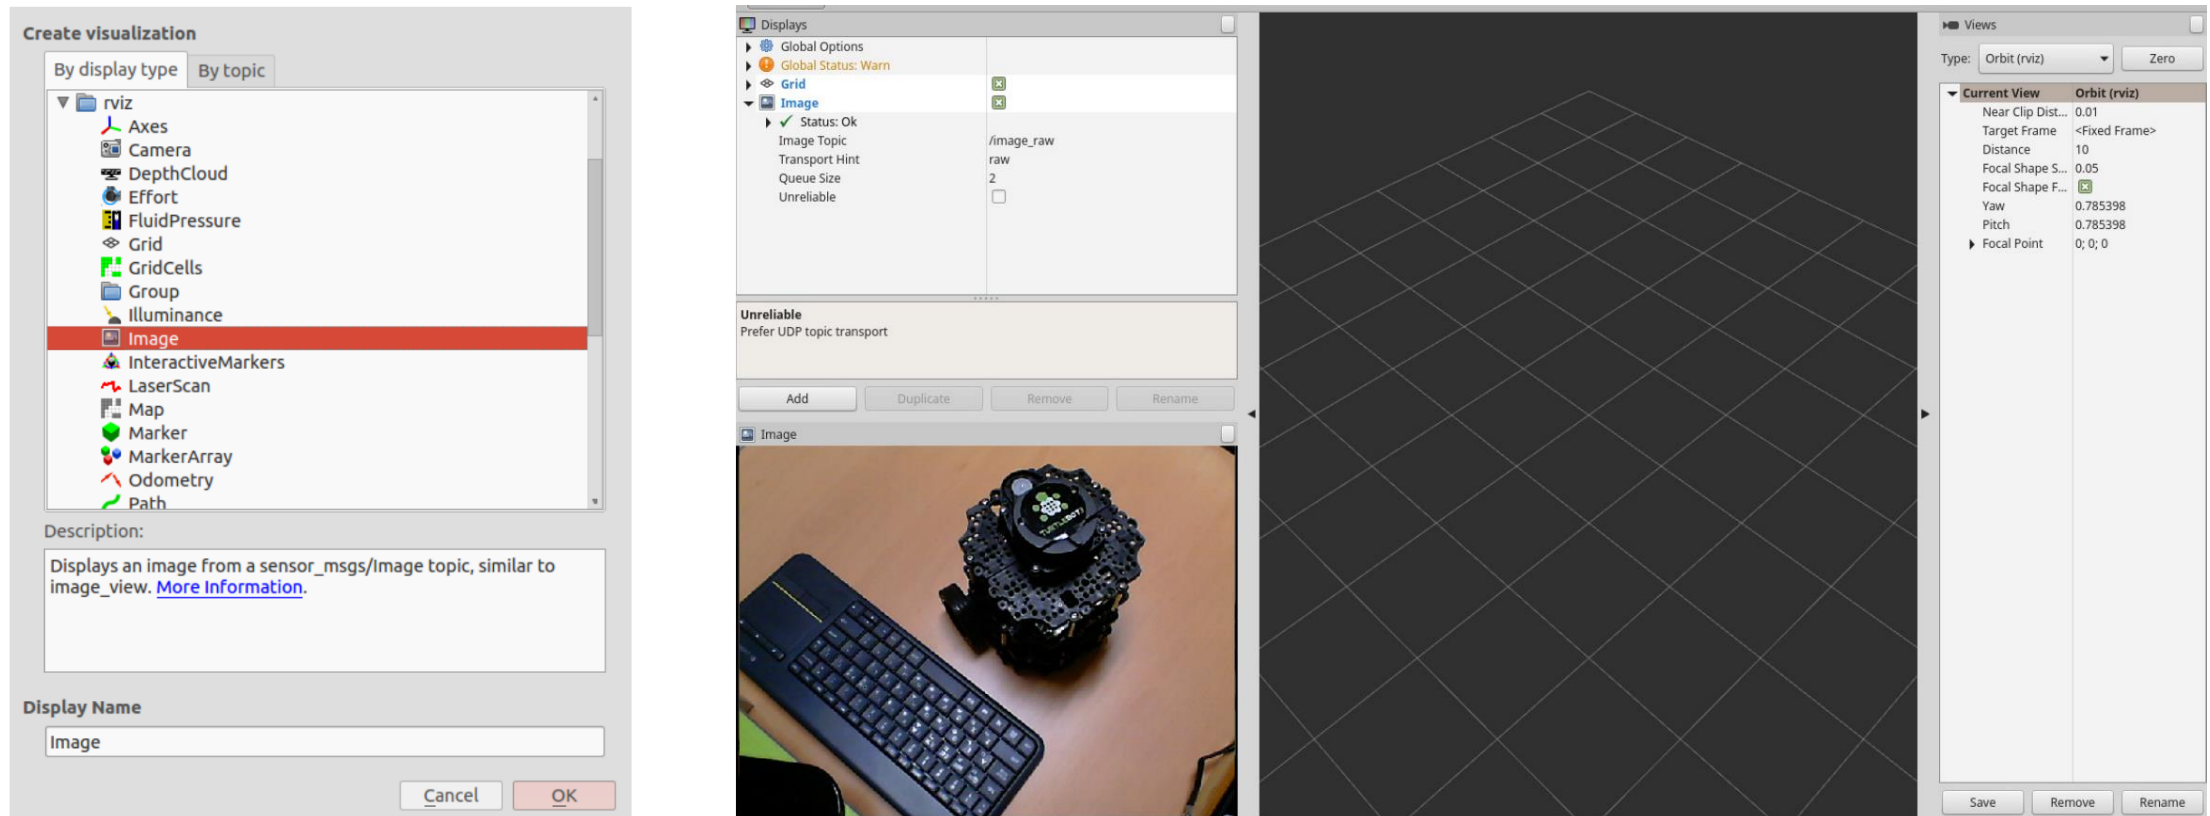

Change the value of [Image Topic] in the [Image] option to '/usb\_cam/image\_raw'



# ROS camera calibration


You need a large checkerboard with known dimensions. Calibration uses the interior vertex points of the checkerboard

Getting the dependencies and compiling the driver


```
> rosdep install camera_calibration
```

Running the Calibration Node

```
> rosrn camera_calibration cameracheck.py --size 8x6  
monocular:=/forearm image:=image_rect
```

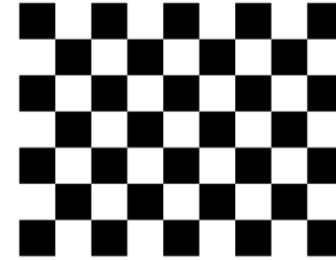

[http://wiki.ros.org/camera\\_calibration/Tutorials/MonocularCalibration?action=AttachFile&do=view&target=check-108.pdf](http://wiki.ros.org/camera_calibration/Tutorials/MonocularCalibration?action=AttachFile&do=view&target=check-108.pdf)

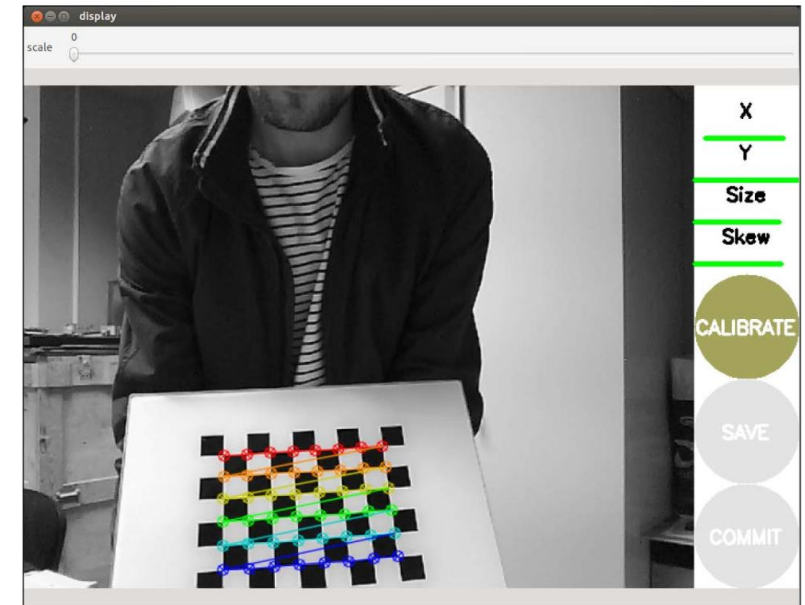

**More Info**

[http://wiki.ros.org/camera\\_calibration/Tutorials/MonocularCalibration](http://wiki.ros.org/camera_calibration/Tutorials/MonocularCalibration)

# OpenCV

- OpenCV is a library of programming functions mainly aimed at real-time computer vision.
- Stands for the Open Source Computer Vision Library
- Developed by Intel in 1999.
- Supported by Willow Garage.
- Cross Platform
- Free for use under “Open-Source BSD License”.



# OpenCV Algorithm Modules Overview




Image Processing




Transforms




Fitting

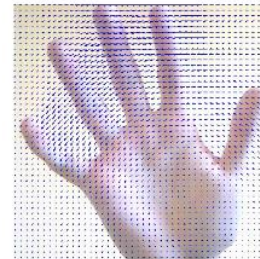


Optical Flow  
Tracking

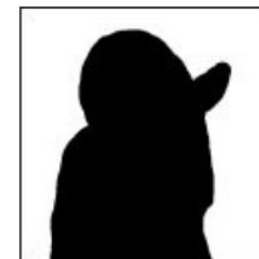


Segmentation

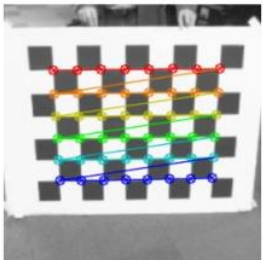

Calibration

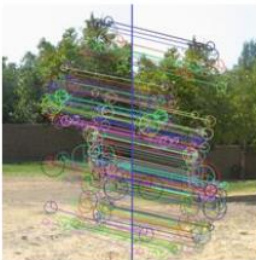

Features  
VSLAM

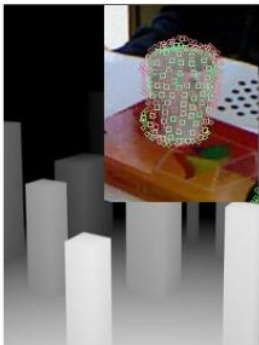

Depth, Pose  
Normals, Planes,  
3D Features



Object recognition  
Machine learning



Computational  
Photography

**Content source**  
G. Bradsky  
Willow garage

# OpenCV Image Processing

## Colors

- **BGR:** The default color. Normal 3 channel color
- **HSV:** Hue is color, Saturation is amount, Value is lightness. 3 channels
- **GRAYSCALE:** Gray values, Single channel

OpenCV requires that images to be in BGR or Grayscale in order to be shown

# OpenCV Image Processing

## Colors

In OpenCv for HSV:

Hue range is [0 , 179]


Saturation range is [0 , 255]

Value range is [0 , 255]

Find HSV values to track

```
> green = np.uint8([[[0,255,0 ]]])  
> hsv_green = cv.cvtColor(green,cv.COLOR_BGR2HSV)  
> print(hsv_green)  
[[[ 60 255 255]]]
```

take [H-10, 100,100] and [H+10, 255, 255] as lower bound and upper bound respectively

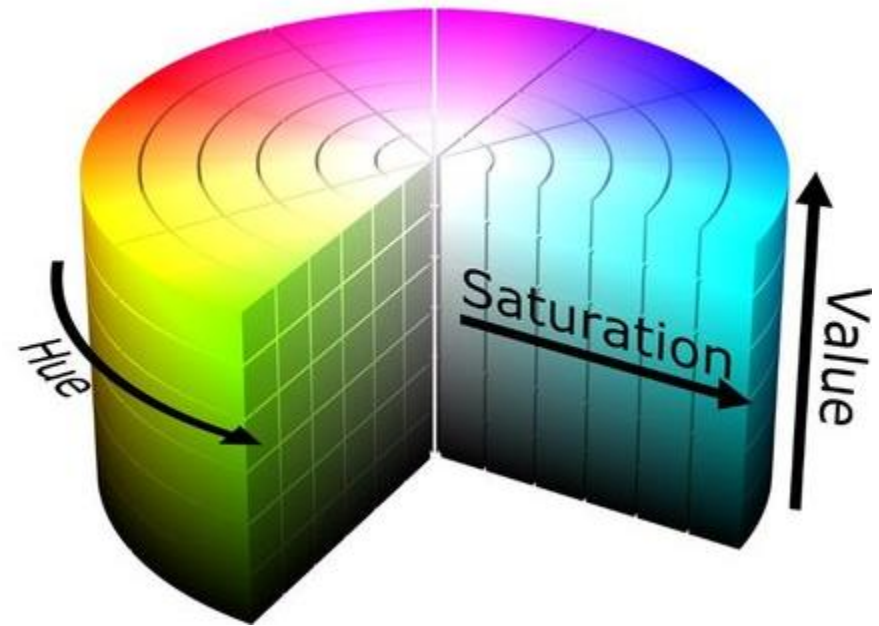




# Image Processing

## What is an Image?

- 2D array of pixels
- Binary image (bitmap)
  - Pixels are bits
- Grayscale image
  - Pixels are scalars
  - Typically 8 bits (0..255)
- Color images
  - Pixels are vectors
  - Order can vary: RGB, BGR
  - Sometimes includes Alpha

but the camera sees this

186	203	127	127	139
185	206	136	136	150
255	30	101	133	170
256	200	139	138	40
257	179	122	179	30
129	165	123	167	36

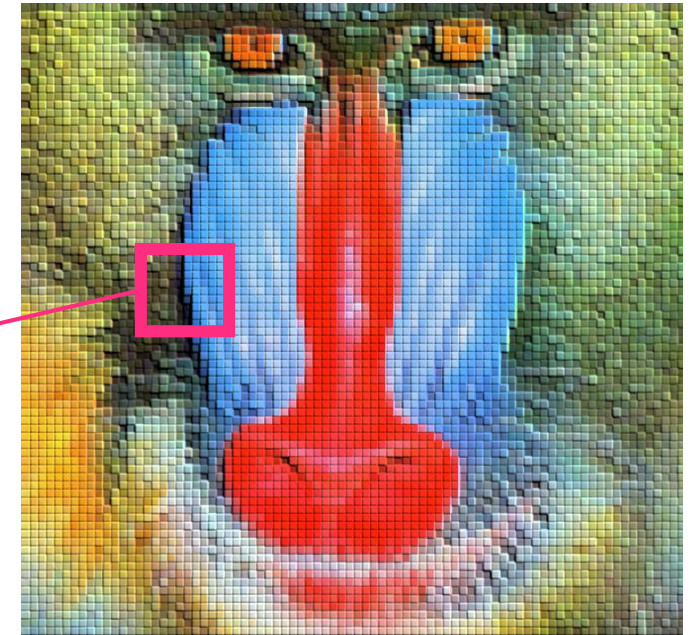

**Content source**

Rahul Sukthankar - The Robotics  
Institute, Carnegie Mellon

# Image Processing

## What is an Image?

- 2D array of pixels
- Binary image (bitmap)
  - Pixels are bits (black=0, white=1)
- Grayscale image
  - Pixels are scalars
  - Typically 8 bits (0..255)
- Color images
  - Pixels are vectors
  - Order can vary: RGB, BGR
  - Sometimes includes Alpha

1	1	0	0	1	1	0	1
1	1	1	0	1	0	1	1
1	1	1	1	0	0	1	1
1	1	1	1	0	0	0	1
1	1	1	1	1	0	0	0



**Content source**


Rahul Sukthankar - The Robotics  
Institute, Carnegie Mellon

# Image Processing

## What is an Image?

- 2D array of pixels
- Binary image (bitmap)
  - Pixels are bits
- Grayscale image
  - Pixels are scalars
  - Typically 8 bits (0..255)
- Color images
  - Pixels are vectors
  - Order can vary: RGB, BGR
  - Sometimes includes Alpha

186	203	127	127	139
185	206	136	136	150
255	30	101	133	170
256	200	139	138	40
257	179	122	179	30
129	165	123	167	36

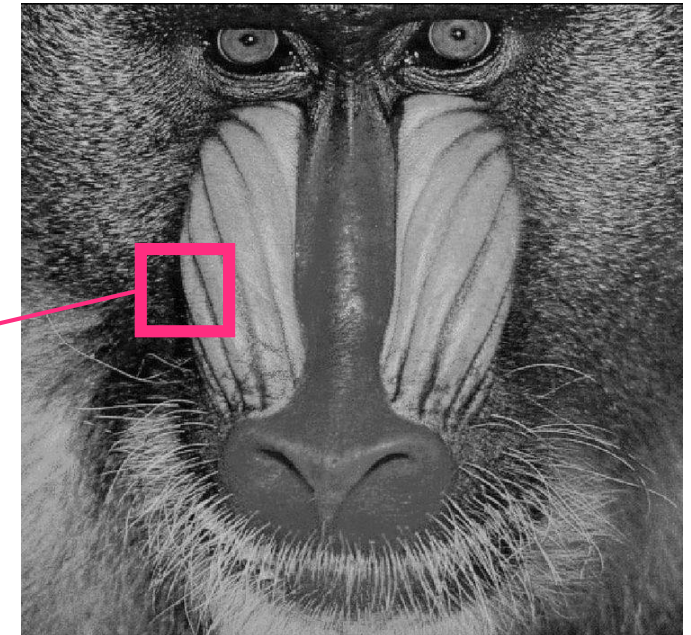

**Content source**


Rahul Sukthankar - The Robotics  
Institute, Carnegie Mellon



# Image Processing

## What is an Image?

- 2D array of pixels
- Binary image (bitmap)
  - Pixels are bits
- Grayscale image
  - Pixels are scalars
  - Typically 8 bits (0..255)
- Color images
  - Pixels are vectors
  - Order can vary: RGB, BGR !!!
  - Sometimes includes Alpha

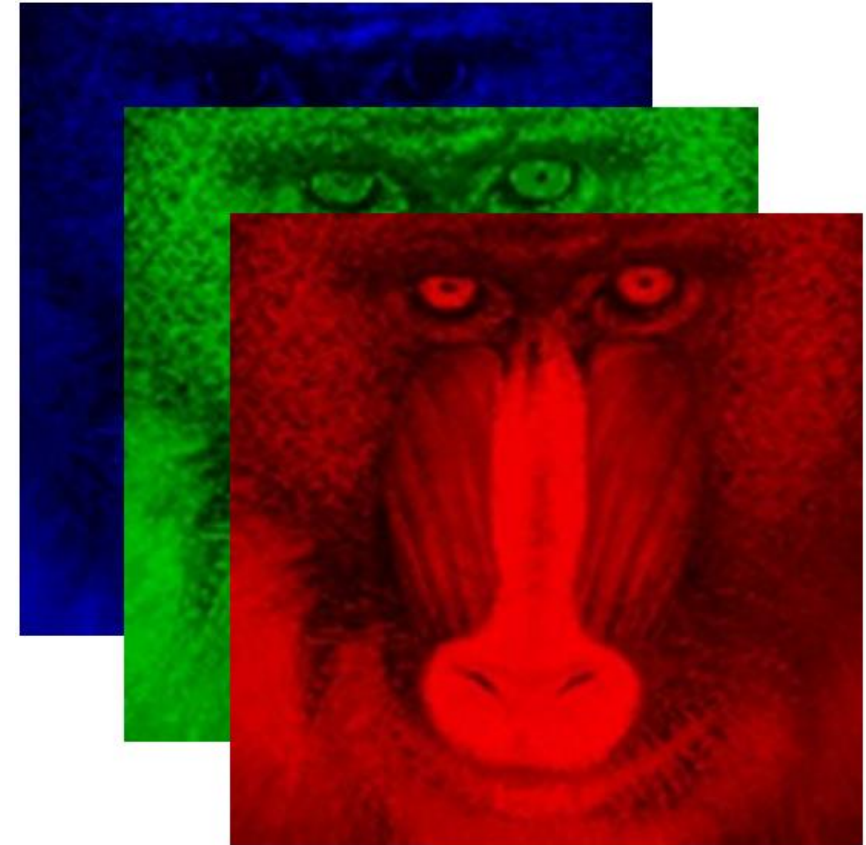


**Content source**

Rahul Sukthankar - The Robotics  
Institute, Carnegie Mellon

# OpenCV Image Processing

## Basic Computer Vision Techniques

- Filtering
  - Remove noise from image
- Segmentation
  - Partition image into groups of pixels
  - Similarity can be decided based on intensity, color, pattern
- Feature detection
  - Extract interesting parts from the image
  - Edge detection, corner detection
  - For example in navigation systems it may prove useful to extract only floor lines from an image

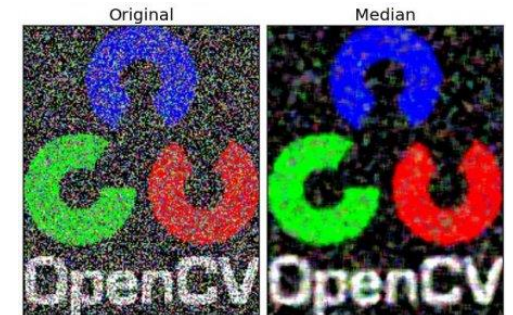

**Content source**

Roi Yehoshua  
- Bar Ilan University


# OpenCV in ROS

Step-by-step procedures:

1. Subscribe the images from the camera driver from the topic `/usb_cam/image_raw` (or different topic depending on the driver used )
2. Convert the ROS images to the OpenCV image type using **CvBridge**
3. Process the OpenCV image using its APIs and find the edges on the image
4. Convert the OpenCV image type of the edge detection to the ROS image messages and publish into the topic `/edge_detector/processed_image`

# OpenCV in ROS

- OpenCV uses image native format from taken from the Intel Image Processing Library (IplImage)
- ROS passes images in its own *sensor\_msgs/Image* message
- *cv\_bridge* is a ROS package that provides functions to convert between ROS *sensor\_msgs/Image* messages and the objects used by OpenCV

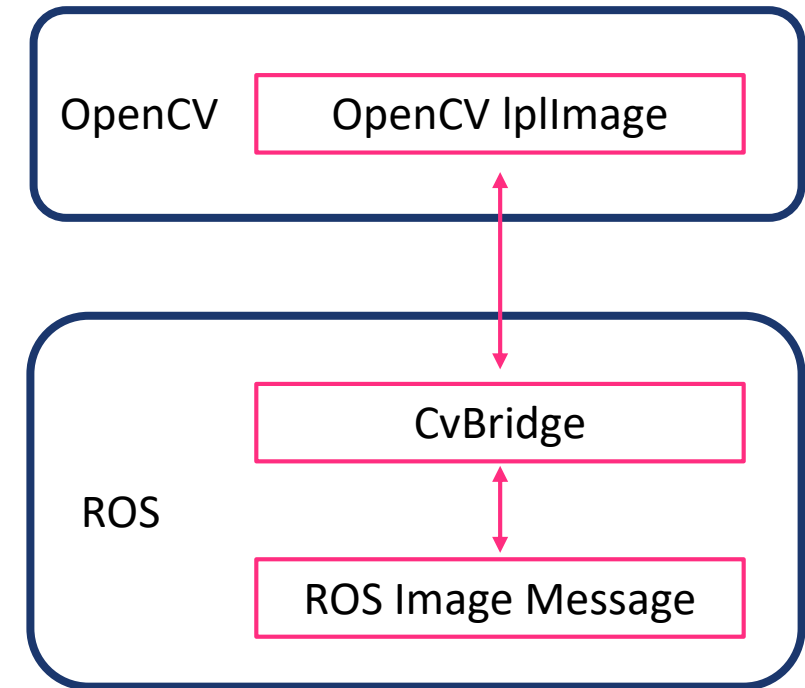

# OpenCV in ROS

## Installation

```
> sudo apt-get install libopencv-dev
```

## Alternatively

```
> sudo apt-get install ros-kinetic-opencv3
```

# Creating a Simple Image Subscriber Node (Python)

## Writing the Node

### Create package

```
> cd ~/catkin_ws/src/  
> catkin_create_pkg vision_tutorials rospy roscpp  
cv_bridge
```

### Edit script

```
> cd ~/catkin_ws/src/vision_tutorials  
> mkdir scripts  
> sudo code simple_camera_view_node.py
```

### Make script executable

```
> cd ~/catkin_ws/src/script  
> chmod +x simple_camera_view_node.py
```

### Make package and source environment

```
> cd ~/catkin_ws  
> catkin_make  
> source ./devel/setup.bash
```

```
#!/usr/bin/python3  
  
import rospy  
from sensor_msgs.msg import Image  
from cv_bridge import CvBridge  
import cv2  
  
bridge = CvBridge()  
  
def image_callback(msg):  
    cv2_img = bridge.imgmsg_to_cv2(msg, "bgr8")  
    cv2.imshow("usb camera video", cv2_img)  
    cv2.waitKey(3)  
  
def simple_camera_view_node():  
    rospy.init_node('image_subscriber')  
    image_topic = "/usb_cam/image_raw"  
  
    rospy.Subscriber(image_topic, Image, image_callback)  
    rospy.spin()  
  
if __name__ == '__main__':  
    simple_camera_view_node()
```

# Creating a Simple Image Subscriber Node (Python)

## Examining the Node

	<pre>#!/usr/bin/python3</pre>
ROS Image message	<pre>import rospy</pre>
ROS Image message -> OpenCV Image converter	<pre>from sensor_msgs.msg import Image</pre>
	<pre>from cv_bridge import CvBridge</pre>
	<pre>import cv2</pre>
Instantiates a <i>cvBridge</i> object	<pre>bridge = CvBridge()</pre>
Converts ROS Image message to OpenCV2	<pre>def image_callback(msg):</pre>
Creates a window and display the image	<pre>    cv2_img = bridge.imgmsg_to_cv2(msg, "bgr8")</pre>
Introduces a delay of n milliseconds while rendering images to windows	<pre>    cv2.imshow("usb camera video", cv2_img)</pre>
	<pre>    cv2.waitKey(3)</pre>
Defines the image topic	<pre>def simple_camera_view_node():</pre>
	<pre>    rospy.init_node('image_subscriber')</pre>
Setup <i>subscriber</i> and define its <i>callback</i> *	<pre>    image_topic = "/usb_cam/image_raw"</pre>
Spin until ctrl + C	<pre>    rospy.Subscriber(image_topic, Image, image_callback)</pre>
	<pre>    rospy.spin()</pre>
	<pre>if __name__ == '__main__':</pre>
	<pre>    simple_camera_view_node()</pre>

\***Recall:** *callback* = function passed as an argument to an other function

# Creating a Simple Image Subscriber Node (Python)

## Running the Node

Launch the webcam driver

```
> roslaunch usb_cam usb_cam-test.launch
```

Run the `simple_camera_view_node` node

```
> rosrn vision_tutorials simple_camera_view_node
```



# Creating a Simple Image Processing Node (Python)

## Writing the Node

### Edit script

```
> cd ~/catkin_ws/src/ vision_tutorials/scripts  
> sudo code simple_image_processing_node.py
```

This node detects a specific color  
in the image and remove the others

### Make script executable

```
> cd ~/catkin_ws/src/script  
> chmod +x simple_image_processing_node.py
```

[https://github.com/LucMarechal/ROS\\_Lectures/blob/765e41aacd5c6428909f0e17e0e41b728617a580/vision\\_tutorials/simple\\_image\\_processing.py](https://github.com/LucMarechal/ROS_Lectures/blob/765e41aacd5c6428909f0e17e0e41b728617a580/vision_tutorials/simple_image_processing.py)

### Make package and source environment

```
> cd ~/catkin_ws  
> catkin_make  
> source ./devel/setup.bash
```

# Creating a Simple Image Processing Node (Python)

## Writing the Node

```
#!/usr/bin/python3

import rospy
from sensor_msgs.msg import Image
from cv_bridge import CvBridge
import cv2

bridge = CvBridge()

def image_callback(msg):
    cv2_img = bridge.imgmsg_to_cv2(msg, "bgr8")
    frame = np.array(cv2_img, dtype=np.uint8)
    color_image = color_detection(frame)
    cv2.waitKey(3)

def color_detection(frame):
    hsv = cv2.cvtColor(frame, cv2.COLOR_BGR2HSV)
    blue_lower = np.array([90,50,50],np.uint8)
    blue_upper = np.array([120,255,255],np.uint8)
    mask = cv2.inRange(hsv, blue_lower, blue_upper)
    cv2.imshow("image mask",mask)
```

```
res = cv2.bitwise_and(frame,frame, mask= mask)
cv2.imshow("color",res)

return res

def simple_image_processing():
    rospy.init_node('image_subscriber')
    image_topic = "/usb_cam/image_raw"

    rospy.Subscriber(image_topic, Image, image_callback)
    rospy.spin()

if __name__ == '__main__':
    simple_image_processing()
```

# Creating a Simple Image Processing Node (Python)

## Examining the Node



### Color detection

Converts images from BGR to HSV

Defining the range of Blue color

Finding the range blue colour in the image

The bitwise and of the frame and mask is done so that only the blue coloured objects are highlighted and stored in res

code snippet

```
def image_callback(msg):
    cv2_img = bridge.imgmsg_to_cv2(msg, "bgr8")
    frame = np.array(cv2_img, dtype=np.uint8)
    color_image = color_detection(frame)
    cv2.waitKey(3)


def color_detection(frame):
    hsv = cv2.cvtColor(frame, cv2.COLOR_BGR2HSV)
    blue_lower = np.array([90,50,50],np.uint8)
    blue_upper = np.array([120,255,255],np.uint8)
    mask = cv2.inRange(hsv, blue_lower, blue_upper)
    cv2.imshow("image mask",mask)

    res = cv2.bitwise_and(frame,frame, mask= mask)
    cv2.imshow("color",res)

    return res
```

# Creating a Simple Image Processing Node (Python)


## Examining the Node

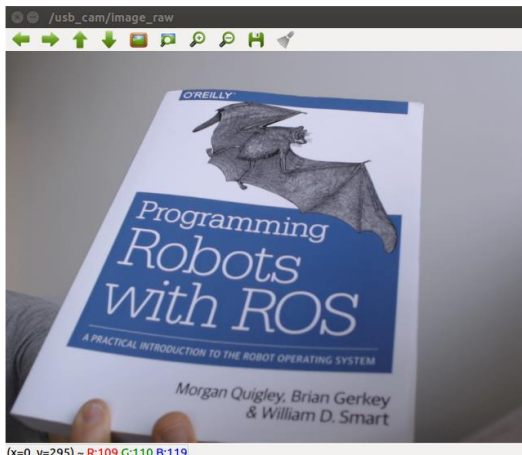

### Edges detection

Converts images from BGR to GREYscale

Computes edges using Canny edges filter

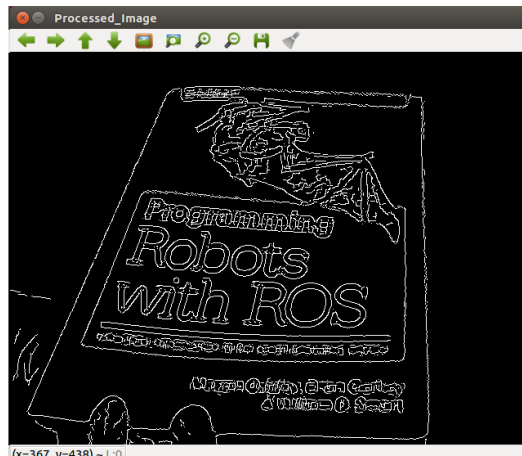

code snippet

```
def image_callback(msg):  
    cv2_img = bridge.imgmsg_to_cv2(msg, "bgr8")  
    frame = np.array(cv2_img, dtype=np.uint8)  
    color_image = edges_detection(frame)  
    cv2.waitKey(3)  
  
def edges_detection(frame):  
    grey = cv2.cvtColor(frame, cv2.COLOR_BGR2GRAY)  
    blurred = cv2.blur(grey, (7,7))  
    edges = cv2.Canny(blurred, 15.0, 30.0)  
  
    return edges
```

# Assignement


## Object Detection and Tracking

### Ball tracking

<https://www.pyimagesearch.com/2015/09/14/ball-tracking-with-opencv/>

<http://www.booppey.com/booppey/opencv-ball-detection-color-based/>


[https://docs.opencv.org/master/d2/d96/tutorial\\_py\\_table\\_of\\_contents\\_imgproc.html](https://docs.opencv.org/master/d2/d96/tutorial_py_table_of_contents_imgproc.html)

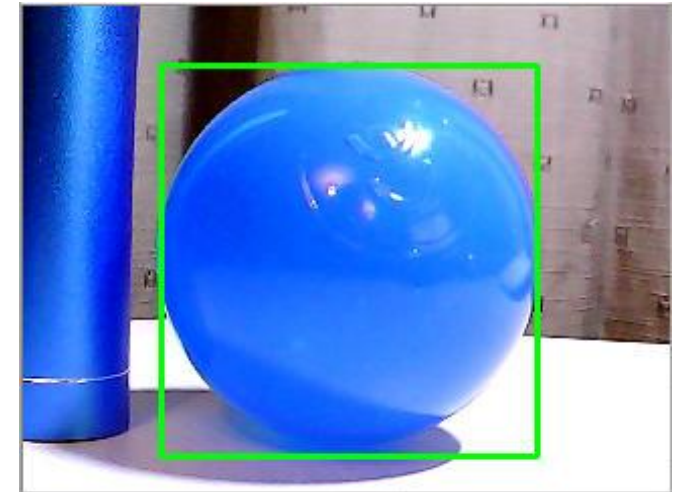



## Further References

- **OpenCV Image processing**
  - [https://docs.opencv.org/master/d2/d96/tutorial\\_py\\_table\\_of\\_contents\\_imgproc.html](https://docs.opencv.org/master/d2/d96/tutorial_py_table_of_contents_imgproc.html)
- **ROS Cheat Sheet**
  - <https://www.clearpathrobotics.com/ros-robot-operating-system-cheat-sheet/>
  - [https://kapeli.com/cheat\\_sheets/ROS.docset/](https://kapeli.com/cheat_sheets/ROS.docset/)

## Relevant books

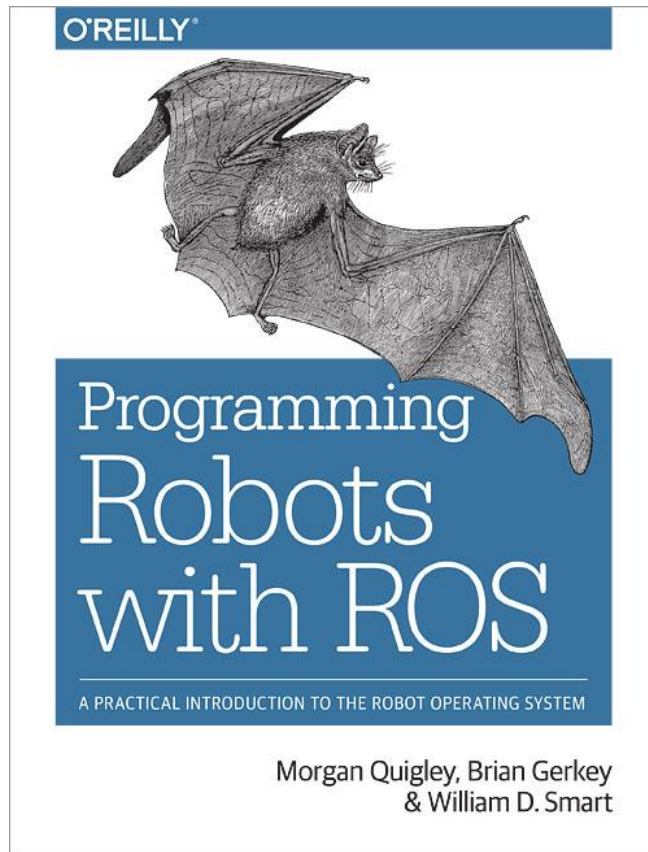

Chapter 12

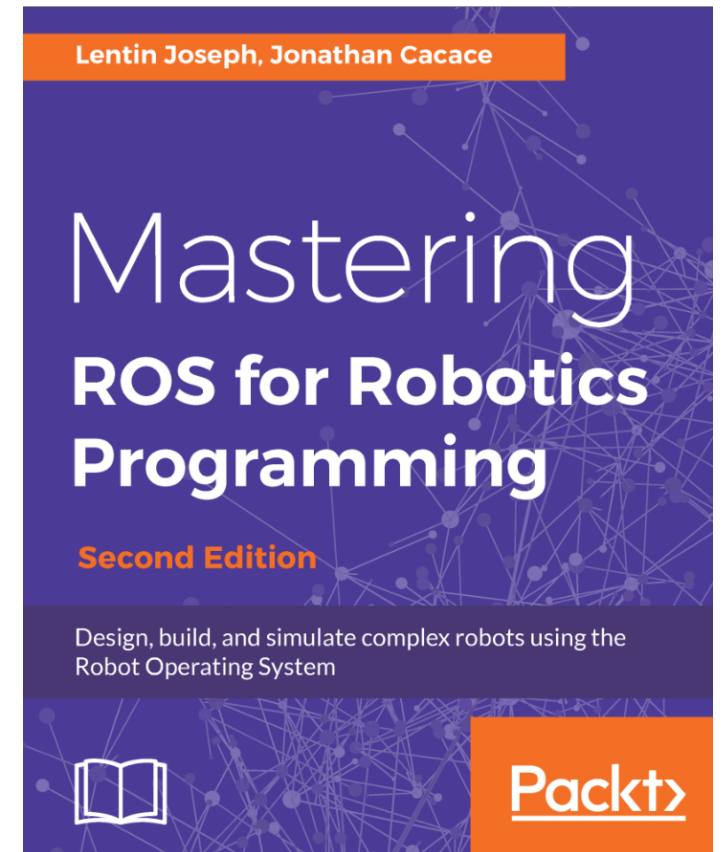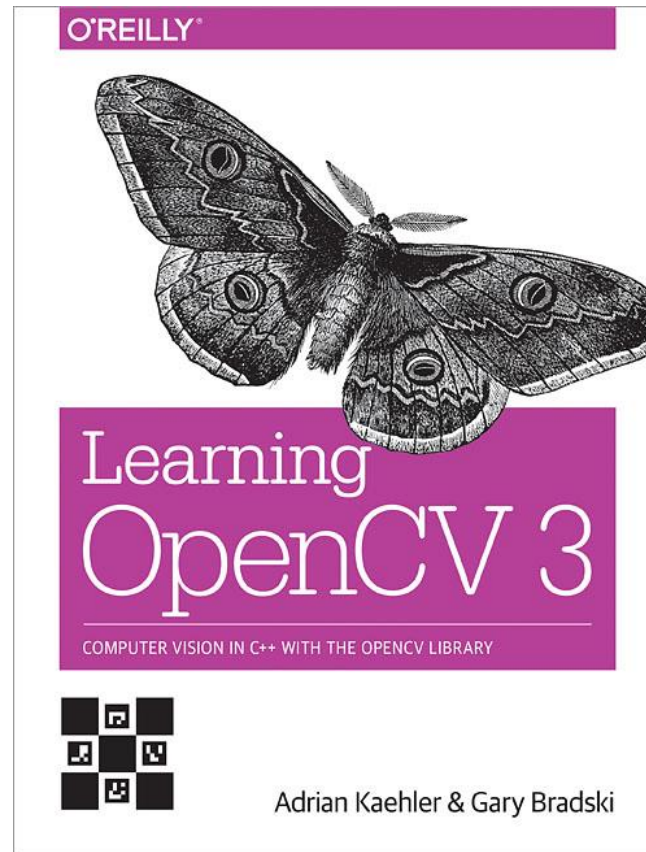

Chapter 10

## Contact Information

### University Savoie Mont Blanc

Polytech' Annecy Chambéry  
Chemin de Bellevue  
74940 Annecy  
France

<https://www.polytech.univ-savoie.fr>

### Lecturer

Luc Marechal (luc.marechal@univ-smb.fr)  
SYMME Lab (Systems and Materials for Mechatronics)



SYMME